


Mini Christmas Tree Ornaments

Using a $1\frac{1}{2}$ " dia. block.

Turn the ball of the ornament, leaving enough wood on the back side to support the ball while hollowing.


Use a $\frac{3}{8}$ " forrester bit drill a hole to the depth that you want to hollow the ball.

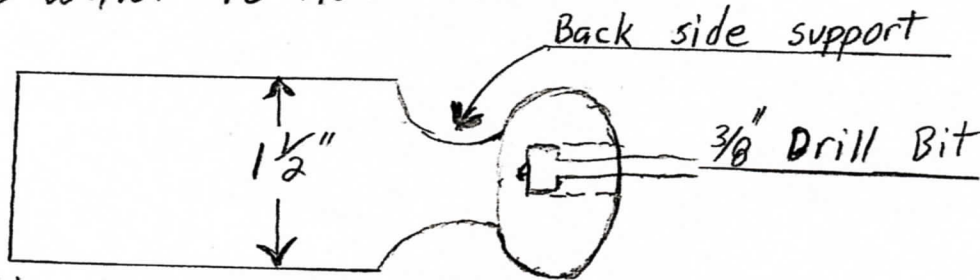

Hollow the ball to about $\frac{1}{8}$ " wall thickness

Finnish turning the balls back side to under $\frac{3}{8}$ " dia. sand the ball.

Drill through the back side of the ball.

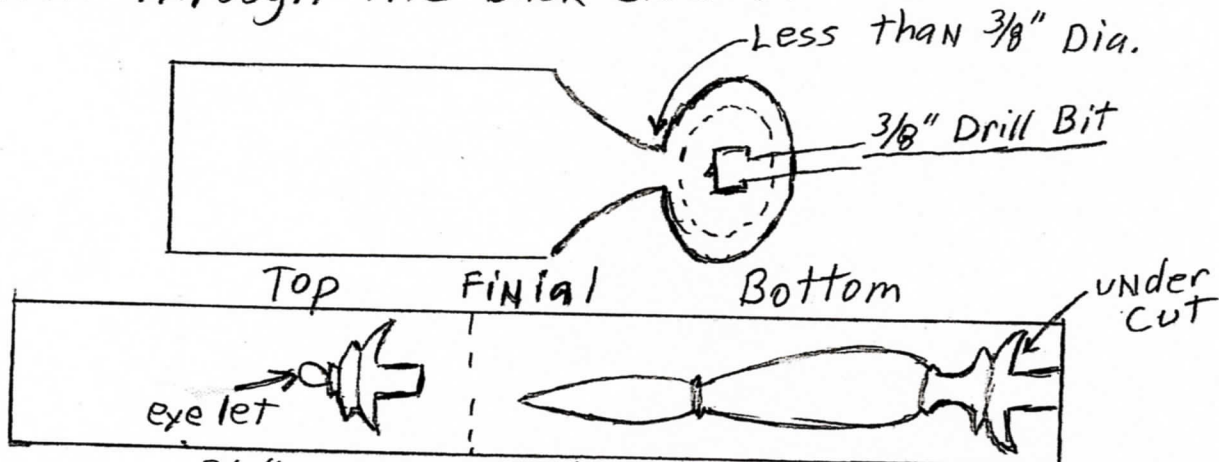

Using a $\frac{3}{4}$ " square $5\frac{1}{2}$ " long, turn between centers. Turn the live center end to fit tightly into the bottom of the ball. Under cut the outer edge so it touches the ball.

Turn the finial to desired shape, leaving the tip attached to the block of wood or plastic.

Using the end of the block, turn the end to fit the top of the ball.

Turn and sand the top like the bottom. Cut off the top. Mount the top into the chuck and drill the hole for the eyelet.

Mount the bottom in to the chuck and sand the tip.

Glue the finials in to the ball.